

# Premier 'EDGE'




## Installation Guide


### Tools Required:



Lift the roof near to the timber kerb before removing the timber packaging and protection tape. Do NOT use a blade to remove packaging.

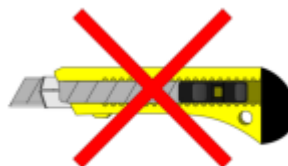

Remove any loose debris from the upstand and apply a generous bead of sealant to eliminate any draughts.

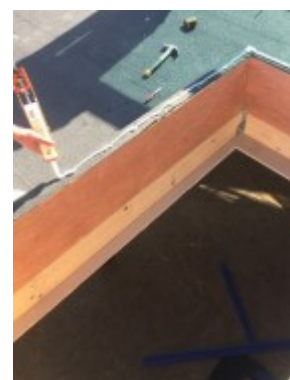

Make sure that the roof has an overhang all around, to allow water to discharge



# Premier 'EDGE'



## Installation Guide Page 2

Centralise the inside of the roof with the internal upstand. This will allow the plasterboard to fit neatly into the plasterboard pocket.

Bend the fixing straps down to the upstand and secure

